


Монтажное исполнение редукторов серии VRL

VRL

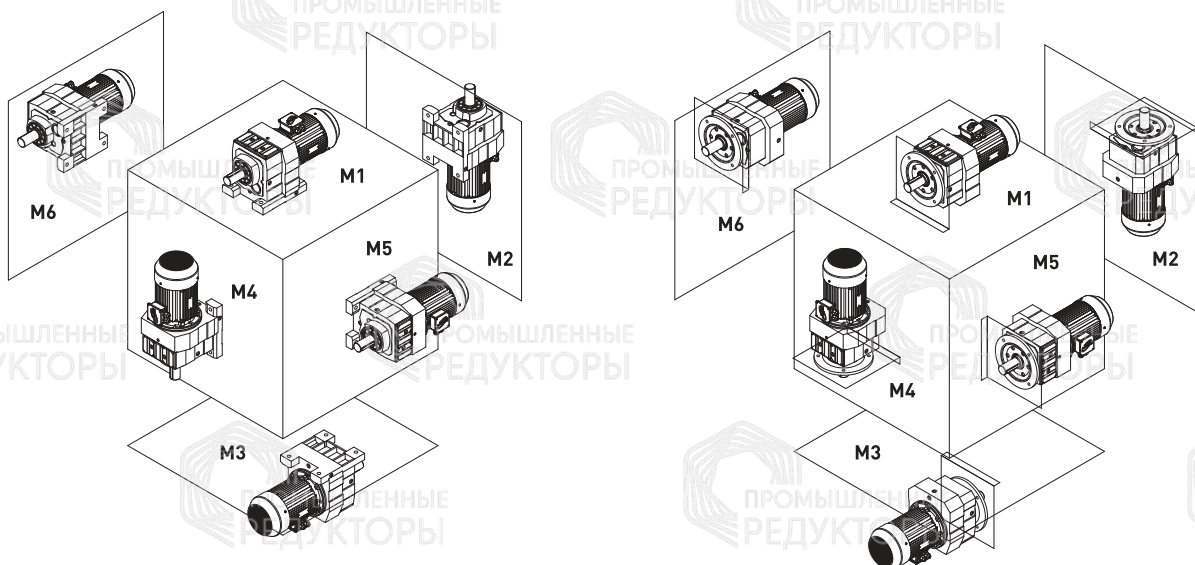

Объем заливаемого масла при различных монтажных положениях, л

Габарит \ Монтажное положение	M1	M2	M3	M4	M5	M6
VRL105	0.7	0.7	0.5	0.8	0.5	0.5
VRL110	1.0	0.9	1.2	1.3	0.9	1.2
VRL115	1.0	0.9	1.2	1.3	0.9	1.2
VRL120	1.2	1.8	1.7	2.0	1.7	1.7
VRL125	1.6	2.2	2.0	2.4	2.0	2.0
VRL130	2.0	3.0	3.2	3.7	2.1	2.3
VRL135	2.2	3.5	3.1	4.4	2.4	2.6
VRL140	5.6	6.9	7.5	8.1	6.6	6.8
VRL145	8.9	12.5	12.3	14.4	11.8	12.2
VRL150	15.6	20.0	20.7	23.6	16.1	19.6
VRL155	20.0	32.2	33.4	35.7	28.8	28.8
VRL160	25.0	51.8	55.2	59.8	46.0	47.2
VRL165	53.0	92.0	89.7	101.2	75.9	79.4